

OPERATING INSTRUCTIONS MODEL DTM-507 MULTILOGGER THERMOMETER



INTRODUCTION

The instrument is a portable digital thermometer that measures external thermocouples of type K, J, R, S, T, E, N. The thermocouples types comply with the N.I.S.T. – ITS 90 standard reference temperature/voltage tables. The thermometer features a dual thermocouple input, an adjustable T/C offset and an USB interface for uploading data to a PC using optional software and cable.

SAFETY INFORMATION

It is recommended that you read the safety and operation instructions before using the thermometer.

WARNING

To avoid electrical shock, do not use this instrument when working voltages at the measurement surface over 24V AC or DC.

WARNING

To avoid damage or burns, do not make temperature measurement in microwave ovens.

CAUTION

Repeated sharp flexing can break the thermocouple leads. To prolong lead life, avoid sharp bends in the leads, especially near the connector.

ENVIRONMENTAL

Ambient Operating Ranges: 0°C to 50°C (32°F to 122°F) <80% R.H.

Storage Temperature: -20°C to 60°C (-4°F to 140°F) <70% R.H.

GENERAL

Display:

Main Second Third the Main and Second display panels are 4 ½ digit liquid crystal display (LCD) with maximum reading of 19999, these panels are used for is playing the value of T1 or T2. The Third panel displays the date, time, or the difference value of T1 to T2. When the input measurement is overloaded, the following is displayed “----.”.

Overload: “----.” or “OL” is display.

Battery: 1.5V x 4 PCS (SIZE AAA) UM-4 R03P.

Battery Life: 120 hours typical with carbon zinc battery.

Dimensions: 160mm(H) x 83mm(W) x 38mm(D)

Weight: Approx. 365g including batteries.

Supplied Wire:

4 feet type “K” thermocouple bead wire (Teflon tape insulated). Maximum insulation temperature 260°C (500°F). Wire accuracy ±2.2°C or ±0.75% of reading (whichever is greater) from 0°C to 800°C.

Input Connector:

Accepts standard miniature thermocouple connectors (flat blades spaced 7.9mm, center to center).

SPECIFICATIONS

ELECTRICAL

Temperature Scale: Celsius or Fahrenheit user-selectable.

Measurement Range:

K-TYPE (0.1°) -200°C to 1372°C (-328°F to 2501°F)

J-TYPE (0.1°) -210°C to 1200°C (-346°F to 2192°F)

T-TYPE (0.1°) -200°C to 400°C (-328°F to 752°F)

E-TYPE (0.1°) -210°C to 1000°C (-346°F to 1832°F)

R-TYPE (1°) 0°C to 1767°C (32°F to 3212°F)

S-TYPE (1°) 0°C to 1767°C (32°F to 3212°F)

N-TYPE (0.1°) -50°C to 1300°C (-58°F to 2372°F)

*Based on the ITS-90 temperature standard.

According to temperature standard ITS-90.

Accuracy:

K/J/T/E-TYPE

±(0.05% rdg + 0.3°C) on -50°C to 1372°C

±(0.05% rdg + 0.7°C) on -50°C to -210°C

±(0.05% rdg + 0.6°F) on -58°F to 2501°F

±(0.05% rdg + 1.4°F) on -58°F to -346°F

N-TYPE

±(0.05% rdg + 0.8°C) on -50°C to 0°C

±(0.05% rdg + 0.4°C) on 0°C to 1300°C

±(0.05% rdg + 1.6°F) on -58°F to 32°F

±(0.05% rdg + 0.8°F) on 32°F to 2372°F

R/S-TYPE

±(0.05% rdg + 2°C) on 0°C to 1767°C

±(0.05% rdg + 4°F) on 32°F to 3212°F

Temperature Coefficient:

0.1 times the applicable accuracy specification per °C from 0°C to 18°C and 28°C to 50°C (32°F to 64°F and 82°F to 122°F).


Input Protection:

24V dc or 24V ac rms maximum input voltage on any combination of input pins.

Reading Rate: 2.5 time per second.

Top Side:

- Sockets of thermocouples T1
- Sockets of thermocouples T2

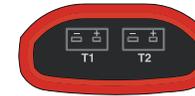

Back Side:

- USB Port
- DC power JACK(12V)



OPERATING INSTRUCTIONS

1. OPERATIONAL MODE

There are three operation modes-Normal, Shift, and Setup Mode.

NORMAL MODE:

This is the default mode, the operating functions for the normal mode are printed on the top of each button in white color.

SHIFT MODE:

The operating functions for the shift mode are printed in gray color on the buttons. While in the normal mode, push the SHIFT button to switch to shift mode. At the lower-right corner of the display panel, the word “Shift” is displayed to indicate shift mode. To switch back to normal mode, press the SHIFT button.

SETUP MODE:

Press the set[] button in normal mode to switch to setup mode, the indicator “SET” is shown on the left side of the display panel. To switch back to normal mode, press SET[] button.

2. NORMAL MODE

The following functions can only be used in the normal mode.

(1) “⏻” Power Button

The “⏻” button turns the thermometer on or off. When enter data REC mode, the power off function is disabled.

(2) “[LIMITS]” Button (only Main display)

The limits function will alert the user when a measurement exceeds a specified limit. To set the limit values, refer to limits function in the setup mode. Press the [LIMITS] button to activate the limits function; the word “LIMIT” should be displayed on the LCD.

When the value of the main display exceeds the Hi limit, the word “Hi” will be displayed and the thermometer will beep in an interval frequency. If the value of the main display is lower then the Lo limit, the word “Lo” will be displayed and the thermometer will beep in a continuous frequency. In limits function, on K, J, type and the scale of temperature at °F when the reading over 2000°F then the reading counts should be time 10. (ex: 2100°F means 21000 counts) To exit the limits function, press the [LIMITS] button.

(3) “☀️” Button

The backlight function is represented by this button “☀️”. Pressing the button will turn on or off the backlight in the LCD. 30 seconds automatic turn off the backlight.

(4) “SAVE/READ” Button

The read data function works in conjunction with the save function in the shift mode, it is used for reading saved data. The save function can be activated in shift mode. Press the SAVE/READ button to activate the read data function; the word “READ” should be displayed on the LCD. To navigate around the save data table, press the overlay “SECOND” button till the “#” sign is displayed on the second display panel. The location of the read pointer within the saved data table will be displayed. The arrow buttons on the overlay are used for scrolling through the save data. Pressing the smaller arrow “▲” or “▼” retrieves the next saved data. Pressing the larger arrow “▲” or “▼” will retrieve the next ten saved data. Pressing the overlay “ESC” button deactivates the read data function.

(5) “LOG/READ” Button

The read log function works in conjunction with the log function, it is used for reading the log data. The log function can be activated in the shift mode. Press the LOG/READ button to activate the read log function; the word “READ” should be displayed on the LCD. Press the overlay SECOND button to rotate through following display menus: T1, T2, GRP, and #. T1 and T2: Displays the T1 or T2 saved value. GRP: Displays the current group number. #: Displays the current location of the read pointer within a selected group. The arrow buttons on the overlay are used for scrolling through the data and groups. Press the smaller arrows “▲” or “▼” will retrieve the next log data or group. Press the larger arrows “▲” or “▼” will

retrieve the next ten log data or group. To navigate around the log data and groups. Press the overlay SECOND button till GRP appears in the second display panel, and then select the group using the arrows, then press the SECOND button again till the “#” sign is displayed. The location of the read pointer in the selected group will be displayed, and then use the arrows to scroll through the data. Pressing the overlay “ESC” button deactivates the read data function.

(7) HOLD Mode (only Main display)

When HOLD mode is selected, the thermometer holds the present readings and stops all further measurements. To activate the data hold mode, press the HOLD button, and “HOLD” is displayed on the LCD. Pressing the HOLD button again cancels the function, and the instrument will automatically resume measurements.

(8) MIN/MAX with Time record Mode (only Main display)

The MIN/MAX function records the highest and lowest value recorded, and it calculates the average reading, and the differences of MAX to MIN. Press MIN/MAX button to enter the MIN/MAX recording mode. The beeper emits a tone when a new minimum or maximum measurement is recorded. Press the MIN/MAX button again to rotate through the current readings: MAX: The highest measurement recorded. MIN: The lowest measurement recorded. MAX-MIN: The difference of the highest and the lowest measurement. AVG: The average values of the measurements.

This mode works in conjunction with the hold function, pressing the HOLD button will stop the recording and measurements (Previously recorded readings are not erased). Press HOLD button again to resume recording and measurements. To prevent accidental loss of MIN, MAX and AVG data, the MIN/MAX function can only be cancelled by pressing and holding down the MIN MAX key for more than 2 seconds. The automatic power-off feature, and the power, °C/°F, REL, SET, Hi/Lo Limits, TYPE, T1/T2 buttons are also disabled.

(10) “T1/T2” Button(MAIN display)

The input selection button [T1/T2] selects the input for the main display panel, T1 thermocouple or T2 thermocouple. Press the T1/T2 button to switch between the two inputs. When meter is turned on, it is set to the display that was last in use.

(11) “T1/T2” Button(SECOND display)

The input selection button [T1/T2] selects the input for the second display panel, T1 thermocouple or T2 thermocouple. Press the T1/T2 button to switch between the two inputs. When meter is turned on, it is set to the display that was last in use.

(12) “T1-T2/TIME” Button(THIRD display)

The input selection button [T1/T2] selects the system time and date, or the differential between the two thermocouples (T1-T2) for the third display panel. Press the T1/T2 button to switch the display options. When meter is turned on, it is set to the display that was last in use.

3. SHIFT MODE

The following functions can only be used in the shift mode.

(2) “°C/°F” Button

Press the °C/°F button to select the temperature scale, readings can be displayed in Celsius (°C) or Fahrenheit (°F). When the thermometer is turned on, it is set to the temperature scale that was last in use.

(4) “SAVE” Button

The save function stores the T1, T2 data in a non-volatile memory. Press the SAVE button to save the current data, the word SAVE is displayed to indicate the data are saved. The build in memory can store up to 256 data. The data can be read using the read function in the normal mode.

(5) “LOG” Button

The data log function continuously records the data according to a spec field time interval. The time interval can be set using the interval time setup function [INVT] in the set up mode. Press the LOG button to activate the log function; the indicator “LOG” and “MEM” will be displayed on the LCD. There are 16 groups that are used for storing the log data. A maximum of 16000 data can be saved in one log session. Pressing the LOG button again to exit the data log function.

(6) “CLR ?” Button

The CLR function clears all the saved and logged data in memory. When the CLR button is pressed, indicator “MEM” is displayed and the “CLR” word on upper-right of LCD will blink. Pressing “ENTER” button printed on the overlay in white word to clear all saved and logged data or “ESC” button to exit this function.

(7) “REL” Button (only Main display)

The relative value function can be used for comparing the saved reference value with other measurements. Press the “REL” button to store the current measurement as the reference value, and the “REL” should be displayed on the right part of the LCD. The next measurement will display the relative value compared to the reference value. Press “REL” button again to clear the reference value and deactivate the relative value measurement function.

(8) “APO” Button

Press the APO button to trigger “Auto power off” function on or off. In this function, the indicator “APO” is shown at the upper left panel of the LCD. When APO (Auto power off) is enabled, it will automatically turn the thermometer off if the key switch is inactive according to the set time (the default time for APO is 5 minutes). Press power button to resume operation.

(10) “TYPE” Button (MAIN)

Press this button to change the type of thermocouple in the main display (K/J/T/E/R/S/N). If the inputs of the main and second display are the same, then pressing this button will change the thermocouple type for both displays.

(11) “TYPE” Button (SECOND)

Press this button to change the type of thermocouple in the second display (K/J/T/E/R/S/N). If the inputs of the main and second display are the same, then pressing this button will change the thermocouple type for both displays.

4. SETUP MODE

The following functions can only be use in the setup mode.

(2) “[LIMITS]” Button (Hi/Lo limit setting) and Mini DIN output

Press the LIMITS button to enter the Hi/Lo Limit setup function, the “LIMIT”, “HI”, and main display will blink on the LCD, and the previous settings are displayed. Press the number button printed on the overlay in white word to set Hi or Lo limit value, the resolution of Hi/Lo limit setup is 1 count. The button “-“(same button as the ESC) can be used to set negative values. Setting is from left to right digit. Press the “ENTER” button to confirm each setting.

(3) “[INVT]” Button (Interval time setting)

To setup the time interval for the log function, press the [INVT] button to set the time the indicator “INV” will be blink on the top-right of the LCD and the previous settings are displayed. Press number button printed on the overlay in white word to change the time interval. Setting is from left to right of the following format (HH:MM:SS). Pressing overlay “ENTER” button to confirm. To exit this function, press the ESC button.

HH: interval Hour (0~23)

MM: interval Minute (0~59)

SS: interval Second (0~59)

MAX: 23:59:59

MIN: 00:00:01

(8) “APO” Button (Auto power off time setting, min. 5 minutes)

Use this function to change the time for the auto power off (APO) function. Press the APO in setup mode, and the indicator “APO” and the main display will blink on the LCD, and the previous setting will be displayed. The default time for APO is 5 minutes. Press the number button printed on the overlay in white word to set the APO time. Pressing overlay “ENTER” button to confirm. To exit this function without changing the setting, press the ESC button.

MAX: 19999 minutes

MIN: 0001 minutes

(9) “[OFS]” Button (Thermocouple offset adjust)

When the main display input is T1 and socket thermocouple is connected, the instrument can adjust the offset of the thermocouple, vice-versa for T2. In the setup mode, press this button to enter the thermocouple Offset Setup Function (OFS) and the indicator CAL should be displayed on the top-right of the LCD while the main display blinks. The previous setting is displayed, press the number button printed on the overlay in white word to change or set the offset of the thermocouple. The resolution of the setup is 0.1°. Press “-” button to set the negative value. Press the overlay “ENTER” button to confirm. MAX: ±1999.9

°C/°F.

(12) “[TIME]” Button (System time setting)

To set or change the system time, press the [TIME] button in the setup mode. The time and date on the third display panel should blink. Enter from left to right in the following format YY:MM:DD and HH:MM:SS. Press number button printed on the overlay in white word to set the system date and time. Press the “ENTER” button to confirm. Exit this function by pressing ESC button.

OPERATOR MAINTENANCE

WARNING

To avoid possible electrical shock, disconnect the thermocouple connectors from the thermometer before removing the cover.

Battery Replacement

1. Power is supplied. By 4pcs 1.5V (SIZE AAA) UM-4 R03.
2. The  appears on the LCD display when replacement is needed. To replace battery remove screw from back of meter and lift off the battery cover.
3. Remove the battery from battery contacts and replace.
4. When not use for long time remove battery.
5. Don't keep in place with high Temp, or high humidity.

Cleaning

Periodically wipe the case with a damp cloth and detergent, do not use abrasives or solvents.

*Software operation manual is in the software disk.